

Lenovo

联想thinkplus真无线蓝牙耳机

Model: LP40 Pro
Input voltage current: 5V/300mA
Battery: 250mAh
Size: 51.5*24.48*45.9mm

FCC ID: 2A8SE-22090001
Output Power: 5V/250mA
Charging Time: 1.5h
Color: Black

Manufacturer: Lenovo(Beijing) Co. Ltd.

Address: Building 2, Building 2, No.6 Xindi West Road, Beijing, China.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

联想thinkplus


真无线蓝牙耳机 LP40pro 黑色

(SN):2S36005719HCC5012005



(PN):

(EAN):



3 6005719 6 97303 7709571

已检验合格

中国制造
Made in China 2023-05.

制造商: 联想(北京)有限公司 中国制造

地址: 北京市海淀区上地西路6号2幢2层201-H2-6


服务电话: 400-812-0102

禁止拆解、撞击、挤压或投入火中。若出现严重肿胀, 请勿继续使用。请勿置于高温环境中, 浸水后禁止使用!

"Lenovo", "thinkplus" 是联想集团所属企业的商标。提及的其他公司、产品和服务名称可能是其他公司的商标。

版权所有 © 2023 联想集团所属企业和许可方可保留所有权。

Country of origin Made in China




联想thinkplus真无线蓝牙耳机



Lenovo


Lenovo thinkplus LivePods LP40pro

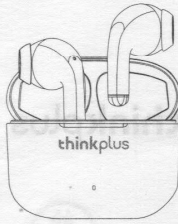

Manual

PLEASE READ ALL INSTRUCTIONS CAREFULLY
AND RETAIN FOR FUTURE USE

Packing list

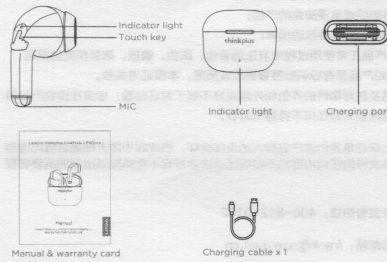

Usage Instruction

- (1) Please do not disassemble and replace any components of earbuds.
- (2) Don't put the earbuds into the water or any others liquid, the earbuds are not waterproof.
- (3) If any liquid enters the product by accidentally, please disconnect immediately.
- (4) Please make sure that there is no water on your hands when disassemble the product to avoid electric shock.
- (5) Do not put the product near by the heat source or expose it to the fire source directly.
- (6) Do not put the product in the environment with strong electromagnetic force, otherwise it will cause product malfunction.

Product specifications

BT version: V5.3
Transmission distance: > 10M
Battery capacity: 30mAh
Playing time: about 5 hours (earbuds)
Charging time: about 1.5 hours (earbuds)
Rated input: 5V ≈ 30mA

Charging case specification

Battery capacity: 250mAh
Charging time: about 1.5 hours
Rated input: 5V ≈ 300mA
(All technical information is subject to actual performance)

Charging the box

Charging status: flashing red light
Charge complete: steady red light
Low battery, Green light flashes please charge



Rated input: 5V ≈ 30mA (earbuds) 5V ≈ 300mA (charging case)

LED light guide

Earbuds	Put the earbuds in the charging box and the earbuds charged automatically	Pairing status: Flashing white Charging status: Steady white Charging completed: Light off Low battery: White light flashes every 2 minutes
Charging case	To charge the case use a type-c cable and 5v adapter	Charging: Red light flashing Charging completed: Red light steady Green light steady (light off after charging completed)

Product operation instructions


- **Turn on**
Method 1: Take out earbuds from the charging box and turn on automatically
Method 2: Long press the touch key for 2 seconds to turn on earbuds
- **Turn off**
Method 1: Put the earbuds back into the charging case and turn it off automatically
Method 2: Press and hold 6 seconds on the touch key to turn off
- **Pairing**
Take out earbuds from charging box, the earbuds will automatically enter the BT pairing mode, select the name of earbuds on your devices' BT list to connect



The operation of the touch key


Music play mode

Left/Right earbuds operation




Volume

Left/Right earbuds operation




Call mode

Left/Right earbuds operation



Voice Assistant

Left/Right earbuds operation



Reset

Reset if the earbuds cannot properly pair with each other or with other devices. Take out the earbuds from the charging case, separately tap 5 times until the earbuds turn off, then put earbuds back to charging case and reset successfully, the earbuds can be connected normally.

The name and content of harmful substances in the product

Part Name	Harmful materials					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Printed circuit assembly	○	○	○	○	○	○
Small structural parts such as shell	○	○	○	○	○	○
This form is compiled in accordance with SJ/T 11364. ○ : Indicates that the content of the hazardous substance in all homogeneous materials of the part is in Below the limit requirements specified in GB/T 26572. X : Indicates that the content of the hazardous substance in at least one of the homogeneous materials of the part exceeds The limit requirements specified in GB/T 26572. The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Substitution of substances. Printed circuit board components*: including printed circuit boards and their parts, electronic components, etc. Depending on the product model, the product you purchased may not contain all the above components.						
Electronic and electrical products sold in the People's Republic of China must mark this Logo, the number in the logo represents the product under normal use Environmental protection use period.						

Warranty statement

Disclaimer

This user manual does not have any form of guarantee, position expression or other implication. The mentioned products, specifications and information are for reference only, and the content will also be updated on the webpage at any time, without additional line notification.

Warranty statement:

The product attached to this document is guaranteed as follows: if the product is twelve (12) months from the date of purchase ("Warranty Period"), under normal conditions of use due to quality defects damaged, can be repaired free; if the manufacturer confirms that it cannot be repaired, free replacement; repaired or replaced product, Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchase date by sale The ticket date shall prevail; if the purchase date cannot be determined, the warranty period shall be 13 Months calculation. If you apply for a warranty, please call the product service hotline first and execute it in the manner instructed by us. When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice. The above guarantee does not apply to the following situations:

1. The validity period of the three packs is exceeded;
2. Alteration of the warranty card and product code does not match the product body;
3. Causes caused by misuse, abuse or improper transportation, use, maintenance or storage impaired or damaged;
4. Failure or damage caused by force majeure (such as earthquake, war, fire, etc.) or accident bad;
5. The zipper and buckle are damaged due to excessive force;
6. Disconnection or tearing caused by excessive load;
7. Any damage caused by sharp objects;
8. Products with signs of burning or water immersion;
9. Damage caused by unauthorized disassembly;

Warranty statement

10. Aging, discoloration, abrasion, rupture and other losses occurred during normal use of the product.
11. If the original identification label of the product is changed or damaged, this guarantee will become invalid. The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should Check on the spot and raise objections to any discrepancies.

The above guarantees are all guarantees we make regarding the products, and are only applicable in mainland China. Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

After-sales service Email: frank@szeyan.cn

Service supervision hotline: 400-812-0102

"Lenovo" "thinkplus" belongs to affiliated enterprises of Lenovo Group.
Mentioned other trademarks, company names, products or services name may be a trademark of affiliated enterprises of Lenovo Group or another company.
Copyright © 2023 Lenovo Group and its licensors. All rights reserved.